


Big Doors

MultiGlide™ Door - Traditional Clad Interior Stacking with 4 11/16" Bottom Rail




On-Floor Drainage Sill Elevations

(When changing rough opening width - adjust each panel by the same amount.)

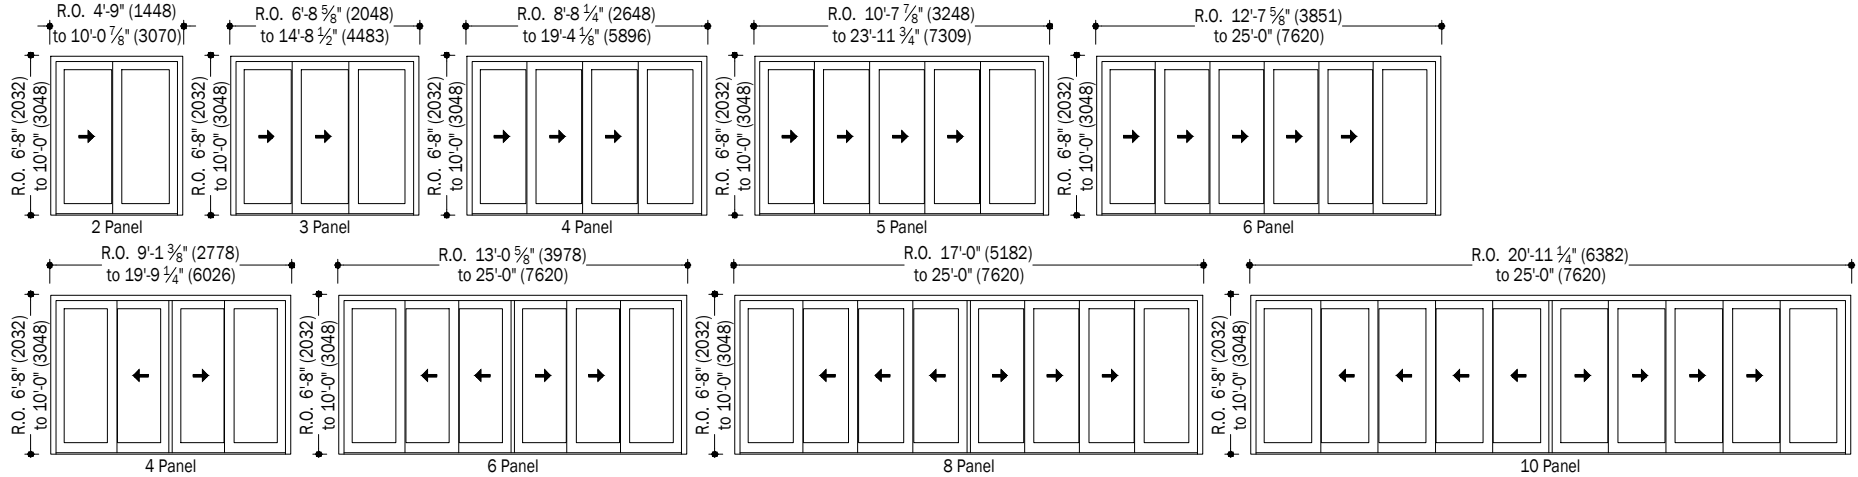

Flush Sill Elevations

(When changing rough opening width - adjust each panel by the same amount.)

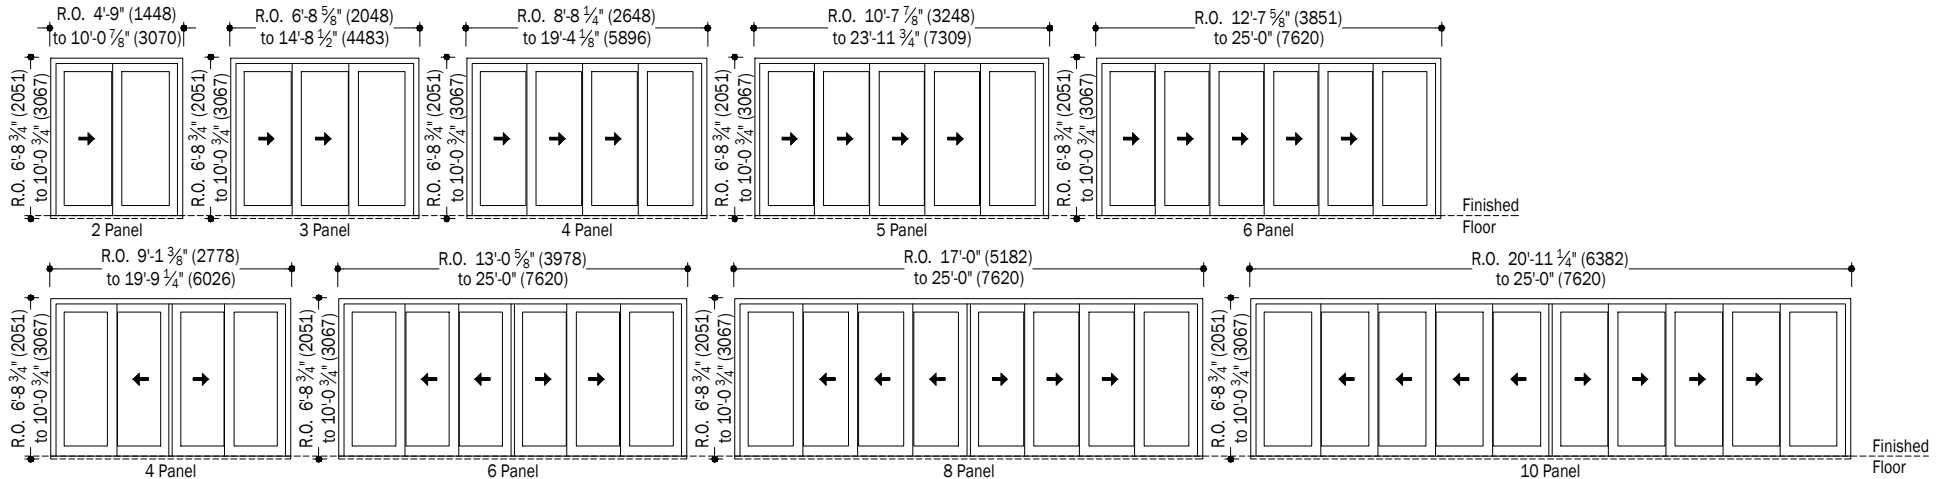

Notes:

Dimensions in parentheses are in millimeters.
Overall sizes can be adjusted in 1/8" (3) increments.

Date: 02/26/17
Scale: 1/8" (3) = 1' (305)


Big Doors

MultiGlide™ Door - Traditional Clad Interior Stacking with 8" Bottom Rail




On-Floor Drainage Sill Elevations

(When changing rough opening width - adjust each panel by the same amount.)

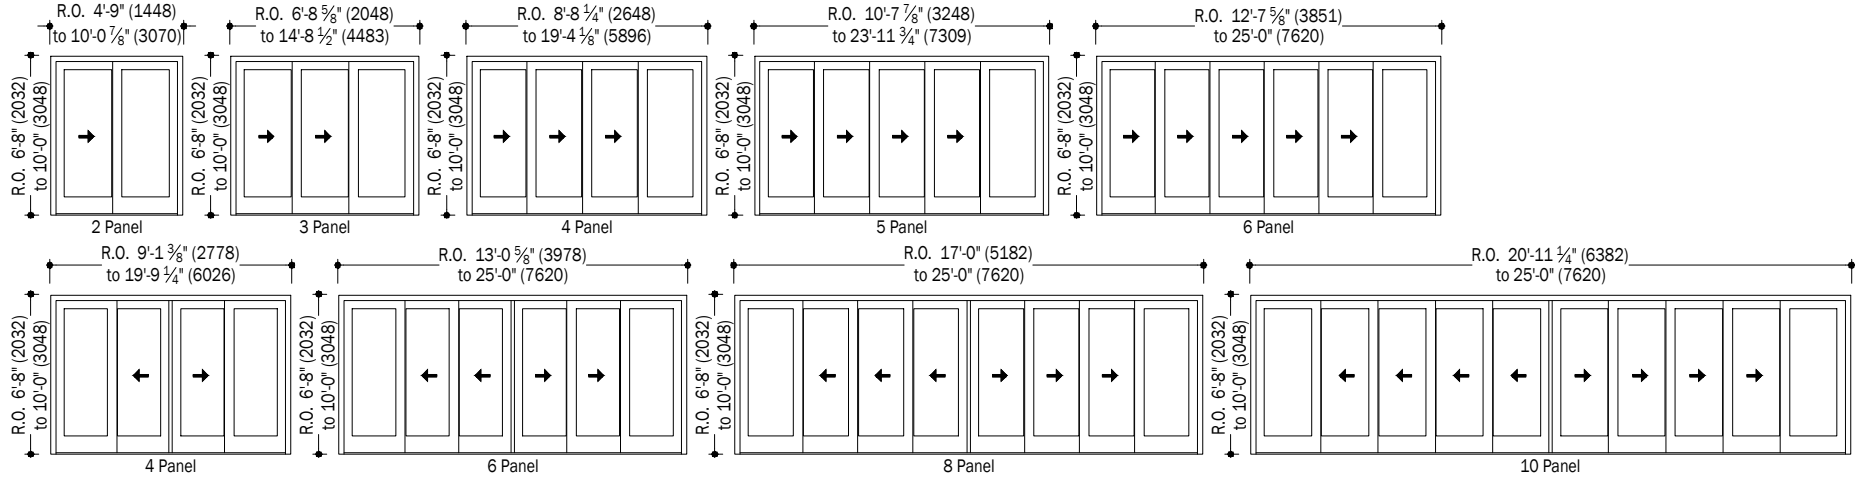

Flush Sill Elevations

(When changing rough opening width - adjust each panel by the same amount.)

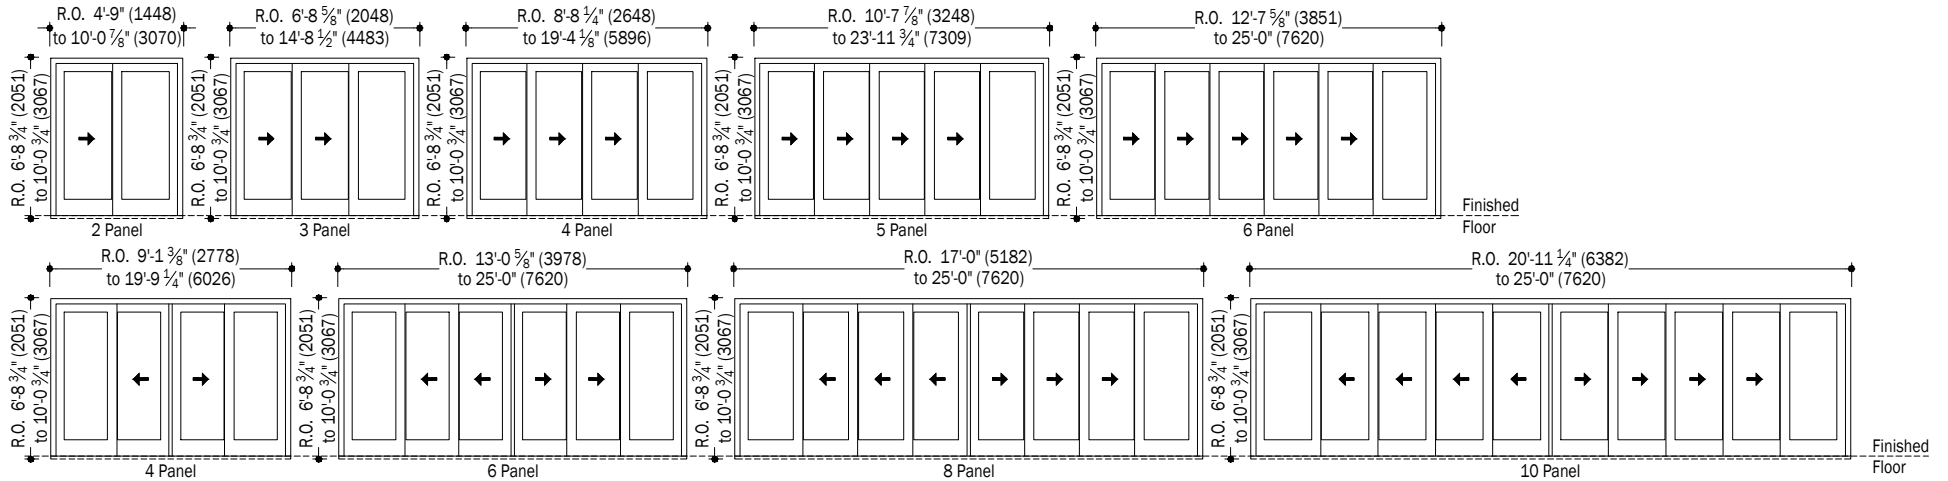

Notes:

Dimensions in parentheses are in millimeters.
Overall sizes can be adjusted in 1/8" (3) increments.

Date: 02/26/17
Scale: 1/8" (3) = 1' (305)


Big Doors

MultiGlide™ Door - Traditional Clad Interior Stacking with 12" Bottom Rail




On-Floor Drainage Sill Elevations

(When changing rough opening width - adjust each panel by the same amount.)

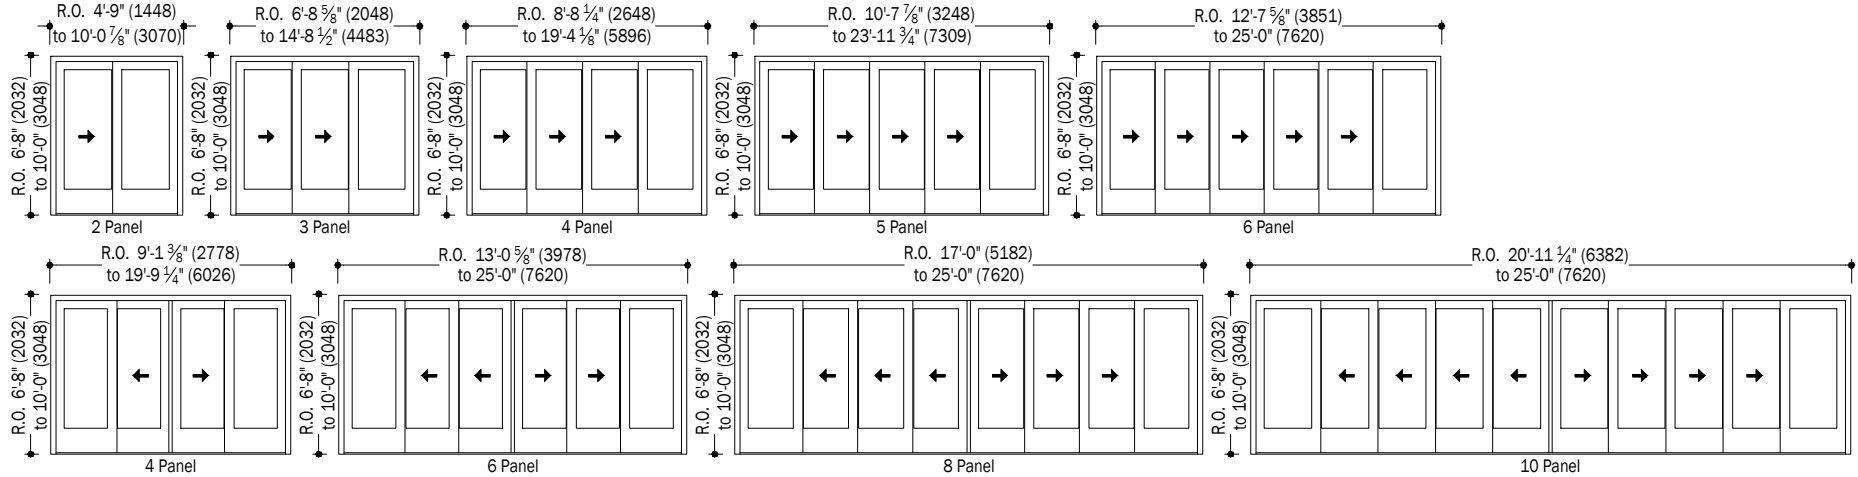

Flush Sill Elevations

(When changing rough opening width - adjust each panel by the same amount.)

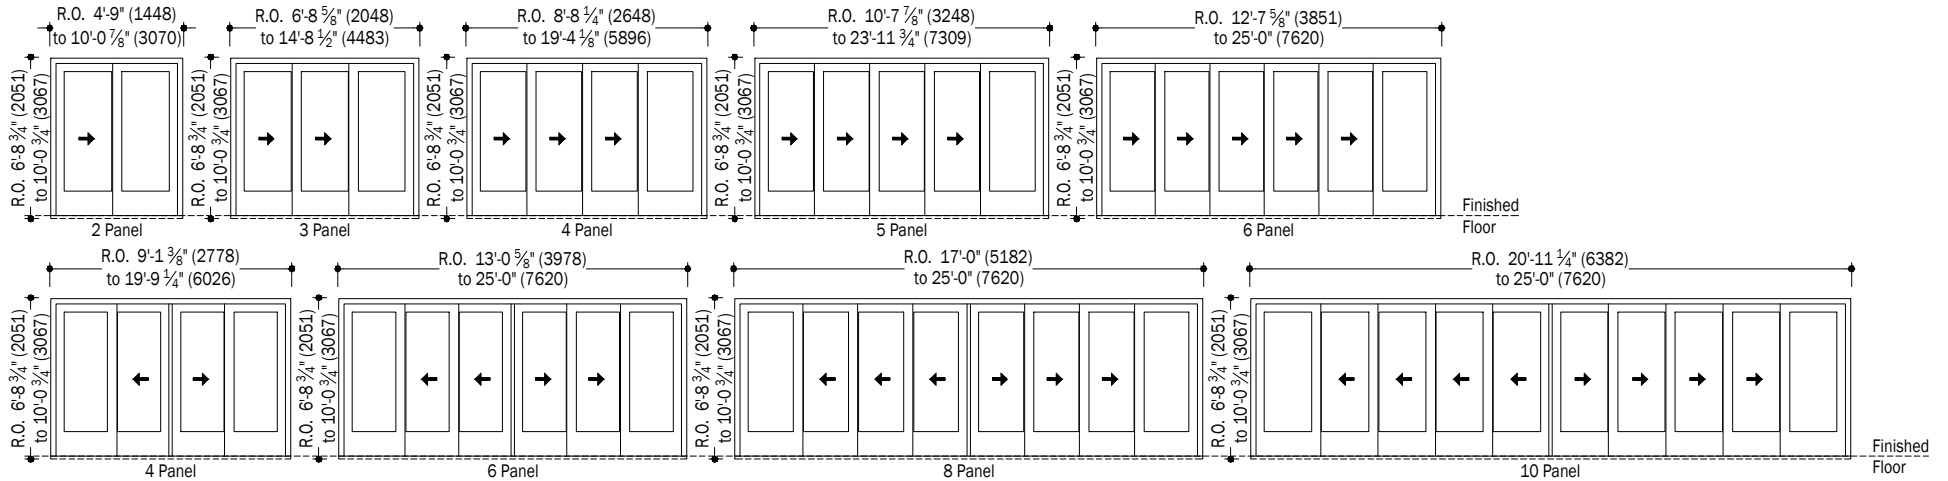

Notes:

Dimensions in parentheses are in millimeters.
Overall sizes can be adjusted in 1/8" (3) increments.