


Big Doors

MultiGlide Pocket Door Traditional (4-11/16" Bottom Rail) - No Screen, Screen, Multi Screen On-Floor Drainage & Flush Sill Elevations




On-Floor Drainage Sill Elevations

(When changing rough opening width - adjust each panel and the pocket by the same amount.)

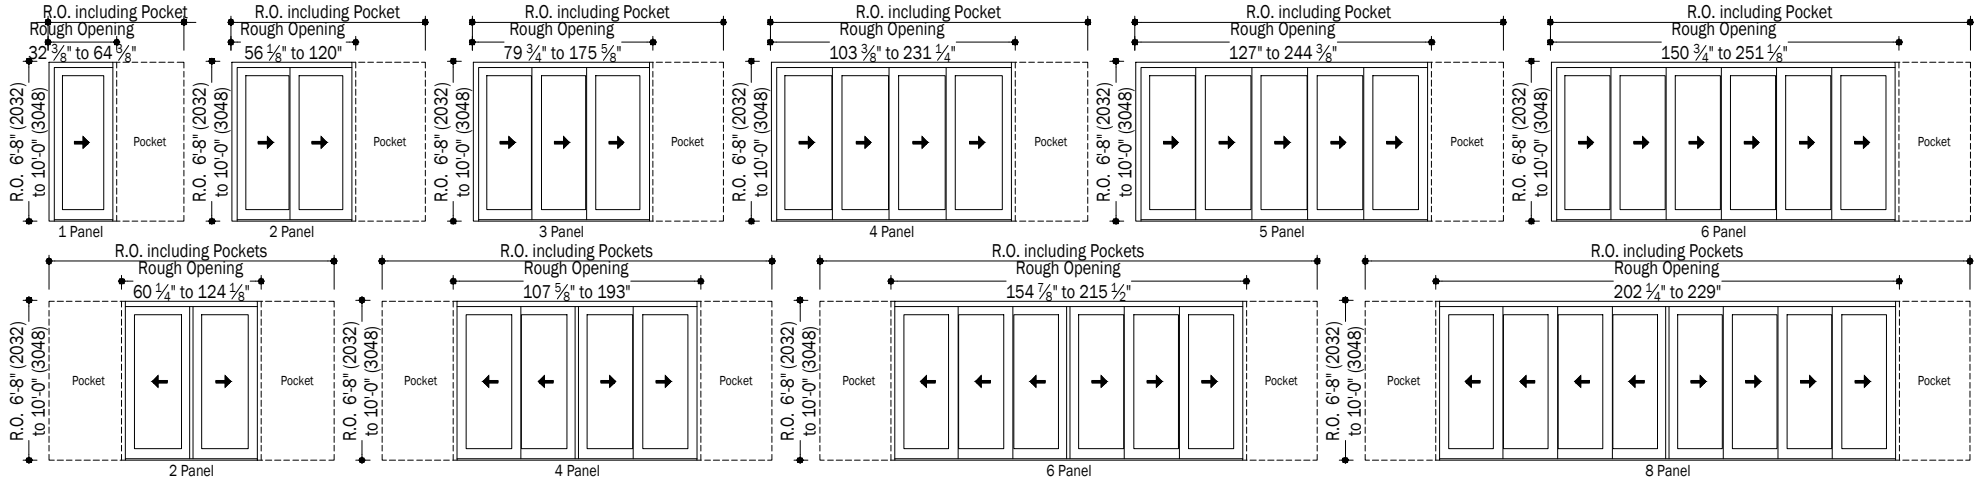

Flush Sill Elevations

(When changing rough opening width - adjust each panel and the pocket by the same amount.)

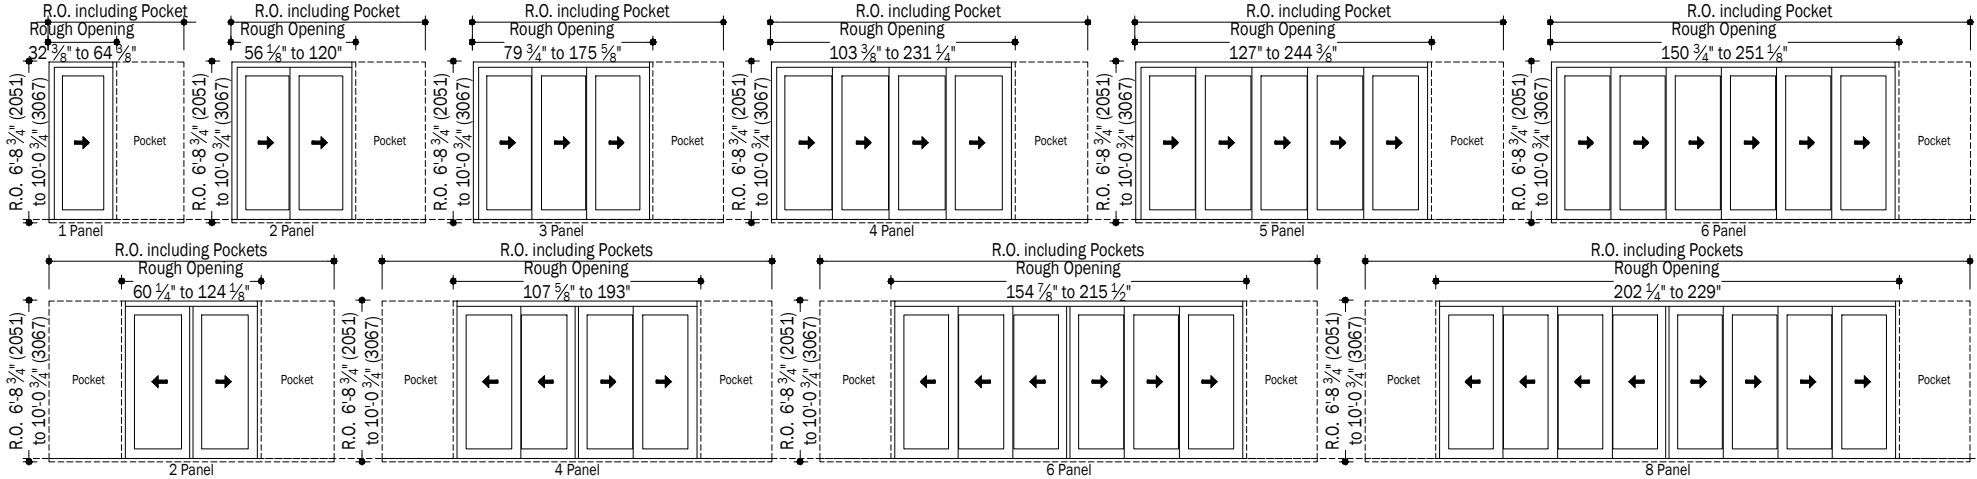

Notes:

Dimensions in parentheses are in millimeters.
Overall sizes can be adjusted in 3/8" (3) increments.


Big Doors

MultiGlide Pocket Door Traditional (8" Bottom Rail) - No Screen, Screen, Multi Screen On-Floor Drainage & Flush Sill Elevations




On-Floor Drainage Sill Elevations

(When changing rough opening width - adjust each panel and the pocket by the same amount.)

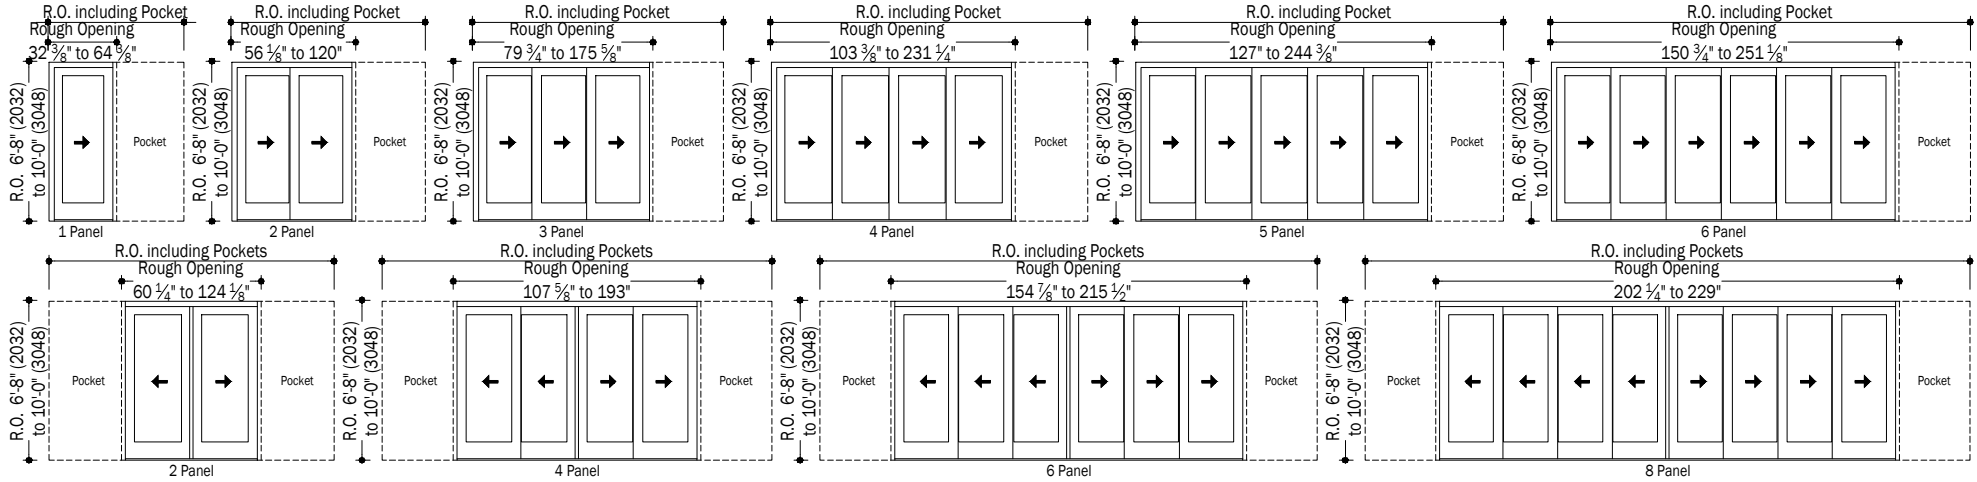

Flush Sill Elevations

(When changing rough opening width - adjust each panel and the pocket by the same amount.)

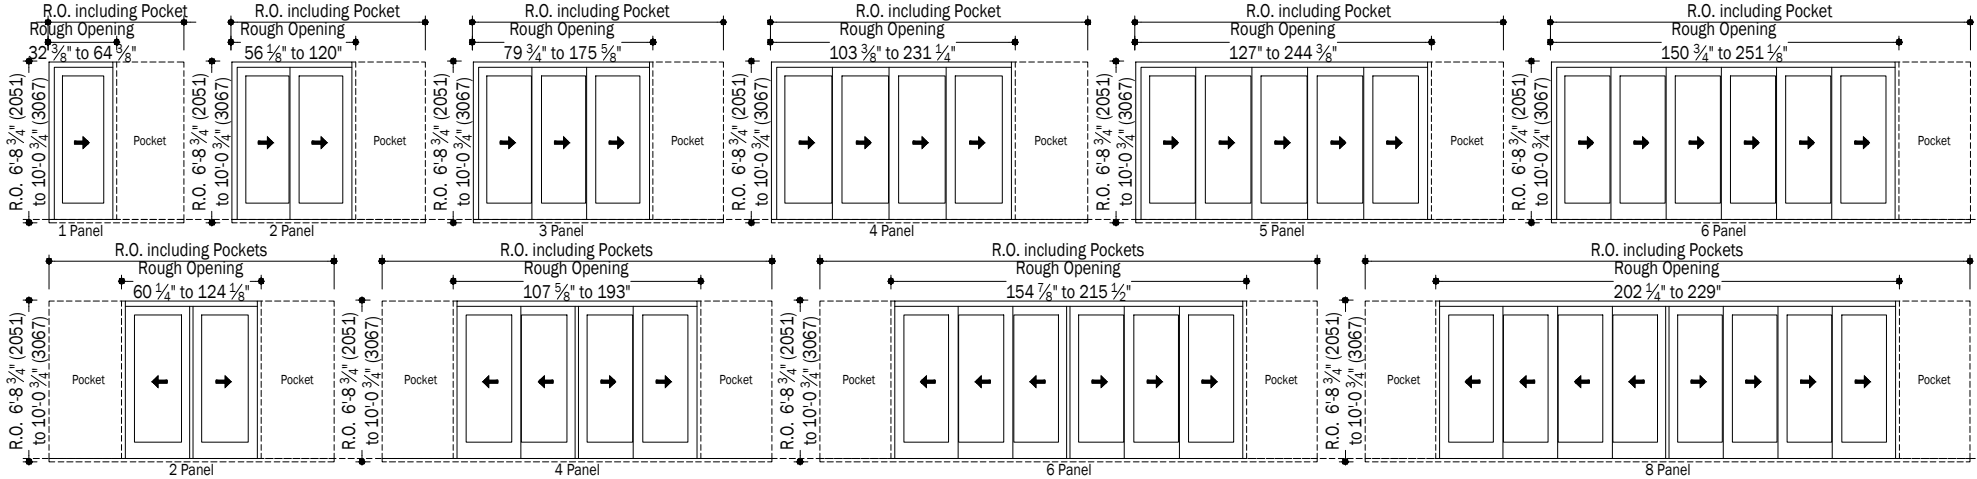

Notes:

Dimensions in parentheses are in millimeters.
Overall sizes can be adjusted in 3/8" (3) increments.


Big Doors

MultiGlide Pocket Door Traditional (12" Bottom Rail) - No Screen, Screen, Multi Screen On-Floor Drainage & Flush Sill Elevations




On-Floor Drainage Sill Elevations

(When changing rough opening width - adjust each panel and the pocket by the same amount.)

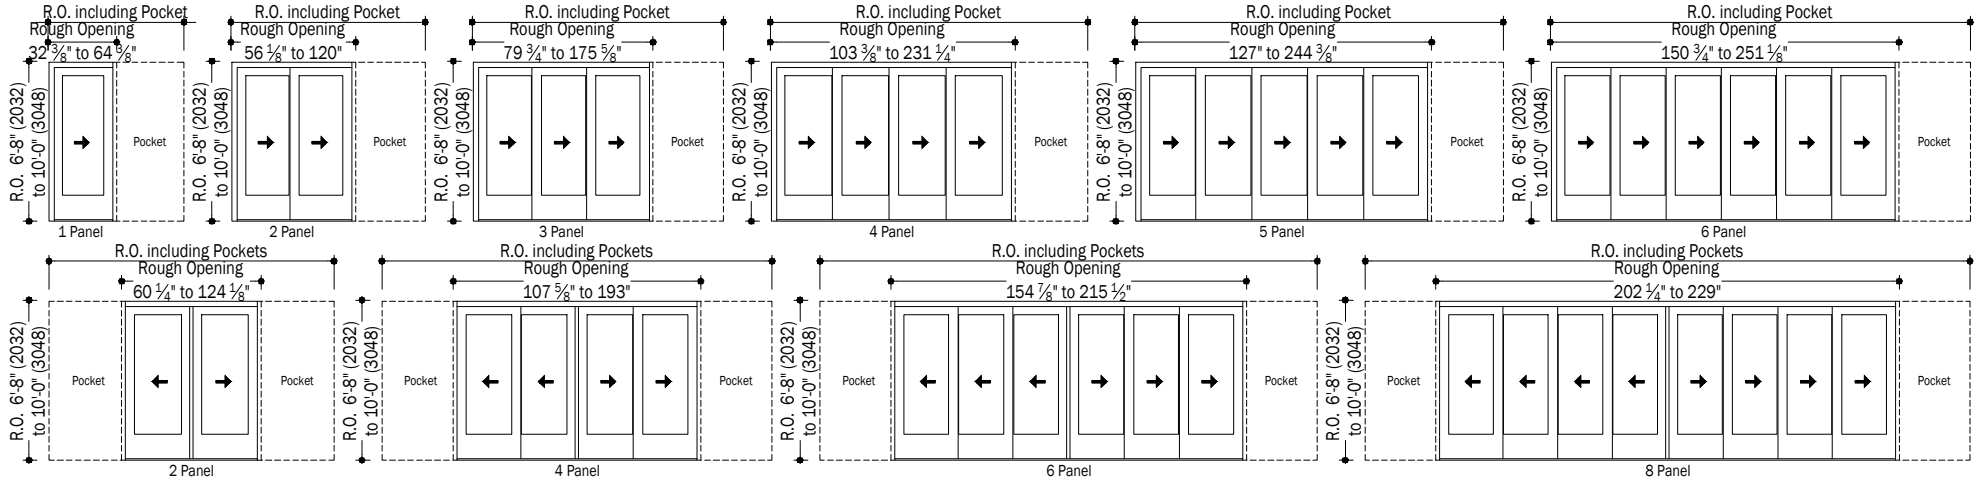

Flush Sill Elevations

(When changing rough opening width - adjust each panel and the pocket by the same amount.)

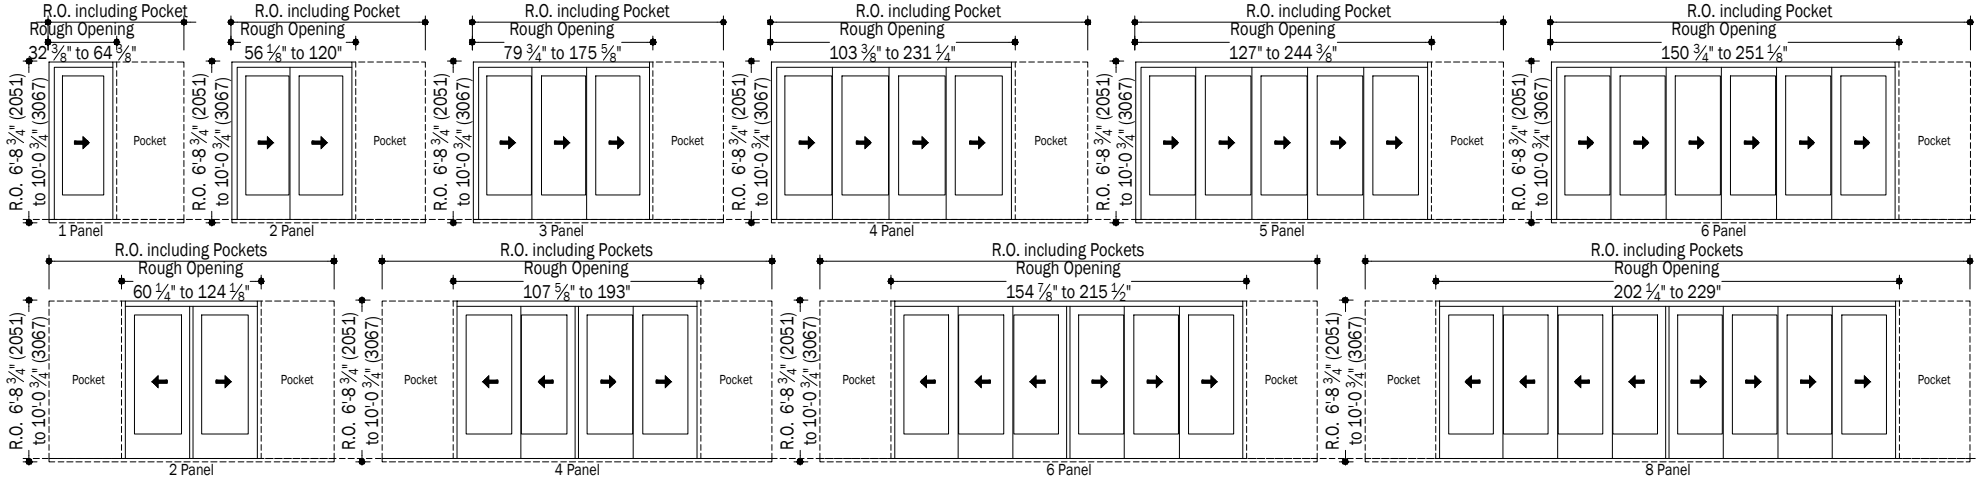

Notes:

Dimensions in parentheses are in millimeters.
Overall sizes can be adjusted in $\frac{1}{8}"$ (3) increments.